


KitCut.

Product User Manual

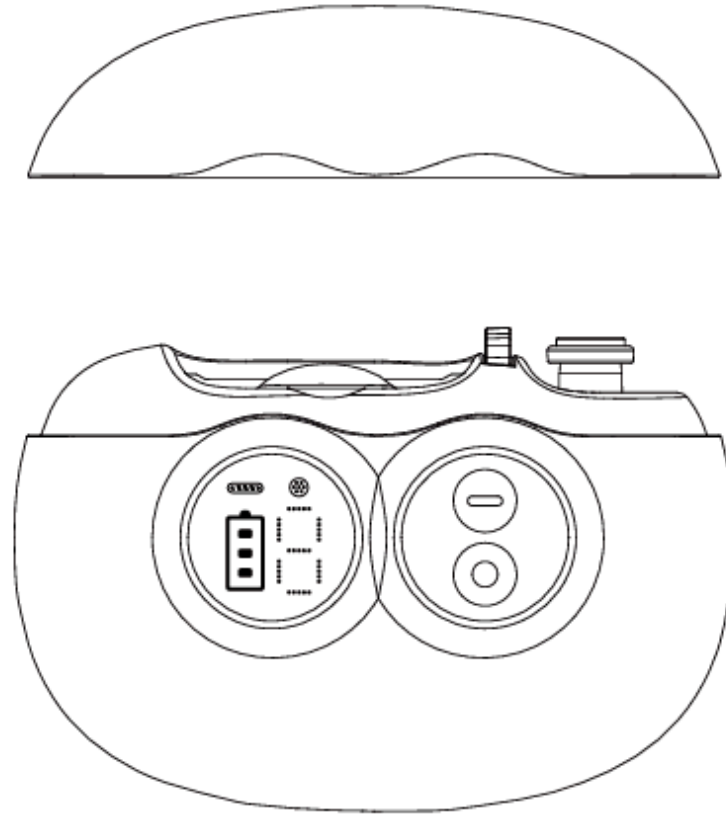

Product Introduction


Magnetic
Protective Cover



Auxiliary light


Nail Clipper Switch

Display

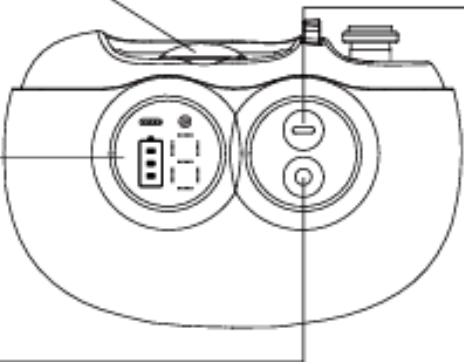

Front view

Polishing and
Grinding Switch

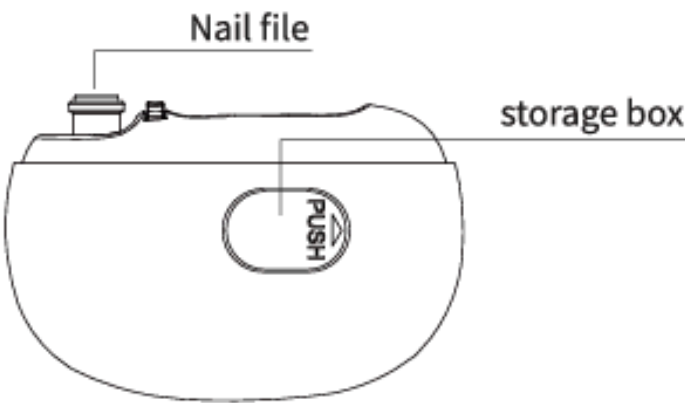


Rear view

Grinding edge


Blade Switch Knob

Nail clipping

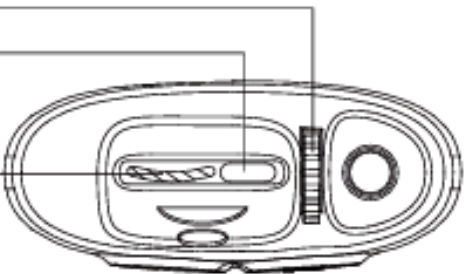

Top view


Charging port

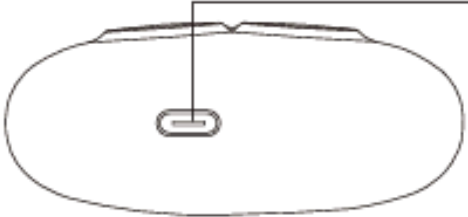

Bottom View

Usage

1. Manicure, nail filing

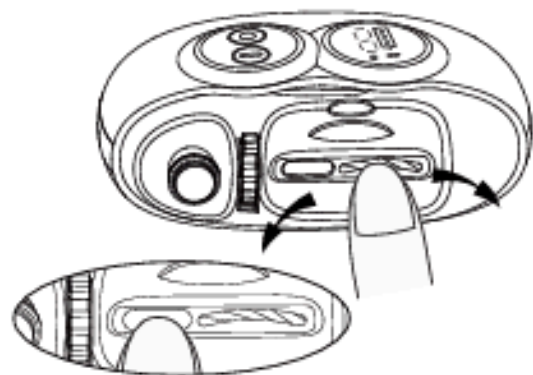

The product is face up, the finger is placed in the finger position, and the nail is inserted into the hole, the finger is turned left and right to complete the round cutting. Turn your finger from side to side to complete the round cut.

2. Sanding and removing nails




Nails parallel to the polishing head, gently polish the surface of the nails and move your fingers slowly to finish removing the nails.

3. Polish and shine nails




Nail perpendicular to the nail head, gently polish the tip of the nail finger left and right rotation to complete the rounded polish

4. Switchable blade sizes

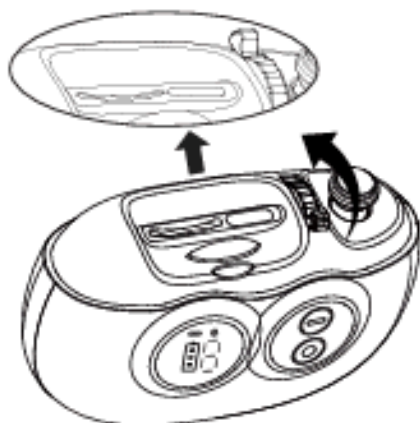

Default large blade setting for adults. Press the button as indicated by the arrow to switch to the small blade setting for children.

5. Cleaning

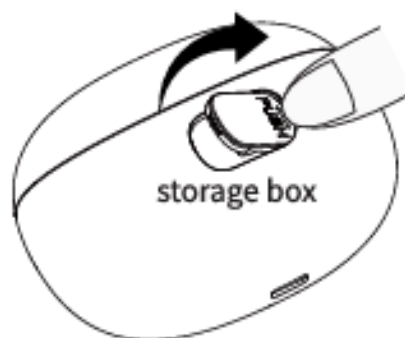

Press down on the PUSH symbol position to open and pour out the nail shavings.

Reminders

The correct way to hold the product when using it is to hold it face up (with the button facing up) and place your fingers in the finger position, if the storage compartment is facing up, there will be roughness, burrs and unevenness in the trimming effect when using it.



This is the wrong direction of use

Instructions for using nail clippers

1. Remove the protective cover before use and ensure the display screen faces upward (with the storage compartment facing downward).
2. Power on (long-press the nail clipper function). The device defaults to high speed, with the high-speed display active.
3. Press the switch again to toggle to low speed, with high speed displayed on the digital screen.
4. Position your finger in the finger holder, place your nail over the blade opening, and gently push the nail while slowly moving either the nail or the device (avoid rapid or forceful movements) to ensure a smooth, rounded trim.
5. Power off: Press and hold the power button during operation. The device will automatically shut down after approximately 10 minutes of use.

How to Use the Nail Polish

1. Power On (Press and hold the polishing/grinding function key).
2. The device defaults to high speed upon startup. Press the key again briefly to switch to low speed, with high speed displayed on the screen.
3. Power Off: Press and hold the power button during operation. The device will automatically shut down after approximately 10 minutes of use.

Caution

Press and hold the polishing button to activate the nail trimmer, which will automatically shut off.

Cleaning

1. Nail debris cleaning: Push down the lid at the PUSH symbol position to flip up the lid, dump the nail debris in the storage compartment, and clean the storage compartment with a small brush.
2. Nail polish head cleaning: Use the brush to clean the surface debris, or pull out the nail polish rotating head forcefully and rinse it with water to rinse off the debris.

Charging

Please charge this product promptly under the following circumstances:

1. When using this product for the first time.
2. When the product fails to start after a long press of the power button, indicating low battery.
3. While charging, the screen displays a slowly flashing breathing pattern; the device cannot be used during charging.

Caution (Please read this carefully when using it for the first time)

1. Sharp blade, children 1~12 years old should be operated by a guardian.
2. Be sure to place it properly and keep it out of the reach of children to avoid children's touch and play, so as to avoid danger.
3. Do not touch any part of the body other than the nail to avoid danger.
4. When this product is running, please do not touch the clothes, accessories and other tools to avoid product failure.

Direction (Please read this carefully when using it for the first time)

1. Please charge the product for the first time to ensure that the battery of the product is charged.
2. This product is not suitable for trimming other parts of the body except nails.
3. Do not use this product for trimming when there is a wound around the nail.
4. Do not wash or soak the product with water for cleaning. Keep away from water and fire sources
5. Do not use this product while charging.
6. This product has a built-in rechargeable battery. Do not put it into a fire or charge it at a high temperature.
7. Do not knock or drop the product. If the product is damaged due to collision and falling, please stop using it.
8. Do not modify ,disassemble or repair the product by yourself .

Tips

1. The product is designed to trim and polish nails. The knife head and glass grinding head are precise. Do not polish hard objects.
2. Do not soak the machine in water to avoid circuit damage.
3. Do not disassemble the machine. The internal structure is complex to avoid damage.
4. Do not trim the same part for a long time to avoid damage.
5. This product is an integrated operation of cutting, grinding and polishing, and it will produce slight dust like nail scraps when used, which is a normal phenomenon.
6. To prevent accidental activation and protect the motor, this product will automatically shut down after approximately 10 minutes of continuous operation.

Parameters

Name : Multi functional electric nail clipper

Model : S8/S8P

Size : 84x35.5x64mm

Net weight : 116g

Rated input : 5V=1A

Charging Interface : Type-C

Battery Capacity : 500mAh

Packing list

Nail clipper : 1

Charging line : 1

Cleaning brush : 1

Instructions : 1

Grinding head: 1

Magnifying glass : 1